

# PACKAGED UNITS KITS AND ACCESSORIES

503391M  
5/2024  
Supersedes 3/2013

## HORIZONTAL RETURN AIR KIT

### INSTALLATION INSTRUCTION FOR HORIZONTAL AIR DISCHARGE KIT (LB-89711B & C; 38K48 & 87M00) USED ON LG/LC/KG/KC/KH 156-360 UNITS

#### Shipping and Packing List

Package 1 of 1 contains:

- 1 - Bottom rear unit panel

#### Application

LB-89711B is used on 242, 300H, 302H and 360 units. LB-89711C is used on 156, 180, 210, 240 and 300S units. The horizontal return air kit provides a bottom rear panel with a horizontal return air opening. The return air cover is removed from the kit panel and placed over the unit bottom return air opening.

#### ⚠ CAUTION

Danger of sharp metallic edges. Can cause injury. Take care when servicing unit to avoid accidental contact with sharp edges.

#### Installation

- 1 - Disconnect all power to unit
- 2 - Remove and retain screws securing unit lower back panel. Remove panel and discard.
- 3 - Remove the horizontal return air cover from the replacement panel provided in the kit. Retain screws.
- 4 - Place the horizontal return air cover over the bottom return air opening and secure with retained screws
- 5 - Place kit bottom rear panel on unit. Secure with retained screws.

#### ⚠ WARNING

Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Installation and service must be performed by a licensed professional installer, service agency or the gas supplier.

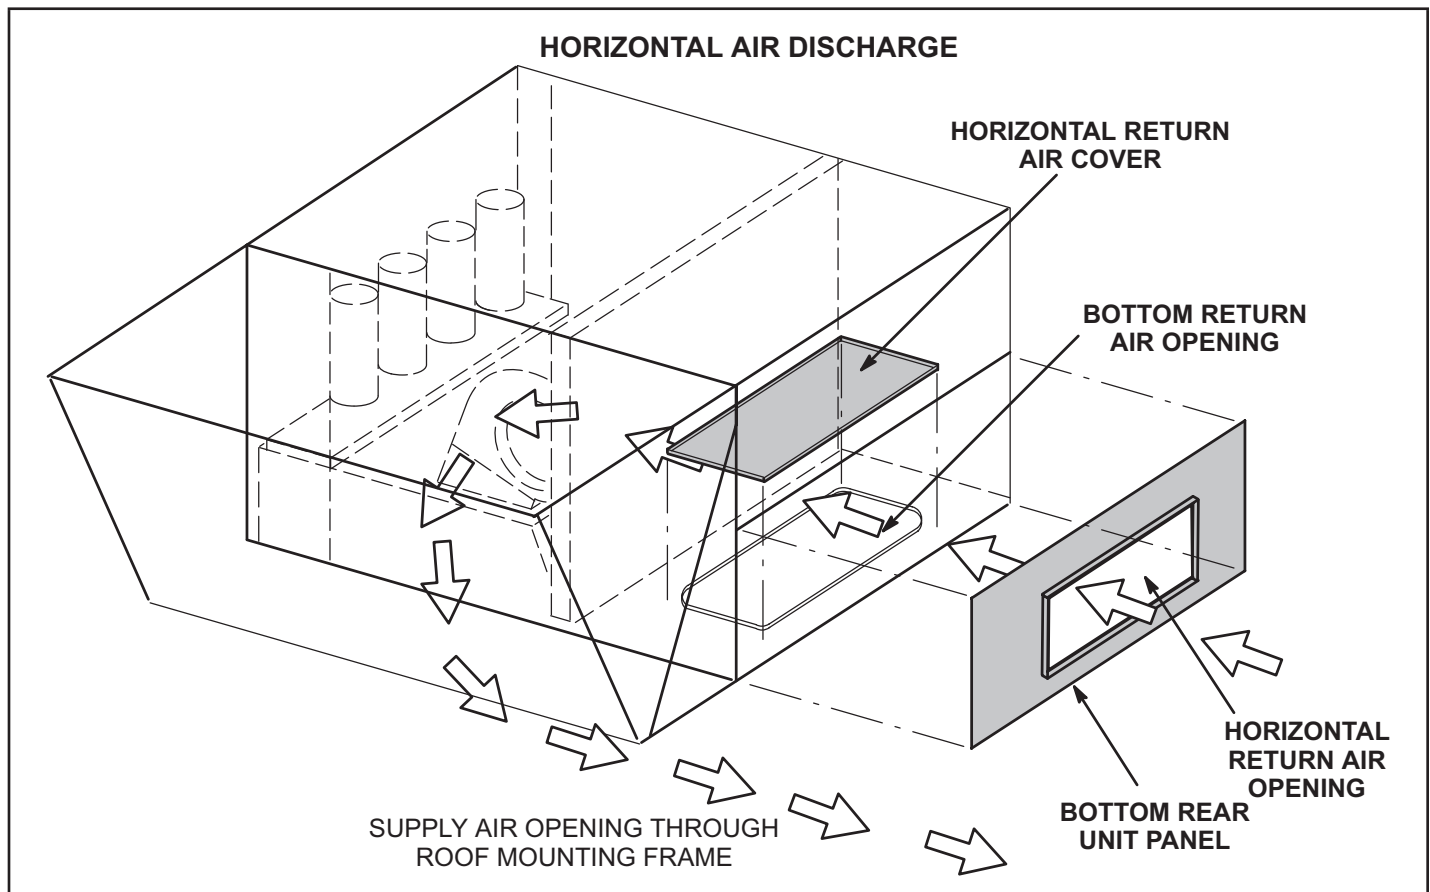


FIGURE 1